



Don't throw away worn
Applicator Heads!


Simply add an 'O' ring,
9mm internal diameter,
2mm thick, available on
Amazon.

Repair worn floppy
Nuvite applicator pads.



Step 1

Begin by disassembling the applicator pad. Hold the pad as pictured below. Press up with your thumbs while pulling down with your fingers effectively bending the pad upwards. This will open the hinge allowing the central attachment unit to pop out.

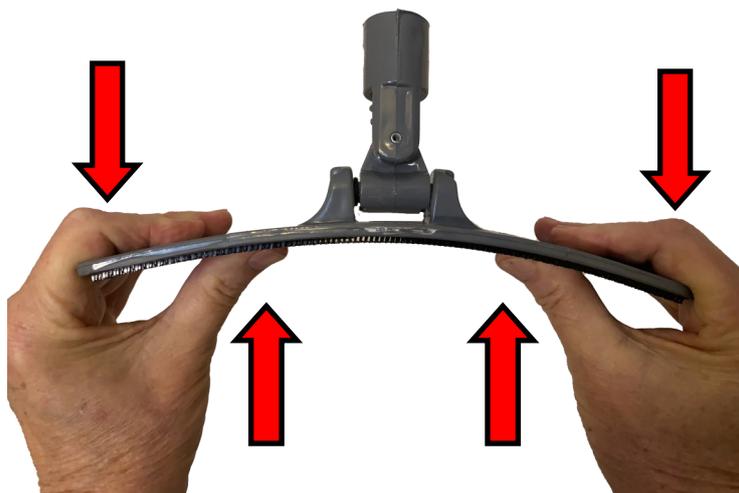

Step 2



Slide 'O' ring over worn spigot.

Step 3

Reassemble with 'O' ring in place.

